




NorthVision

Be Your Vision!




Q & A: Receiver install position

The best location to place the receiver with an interactive display

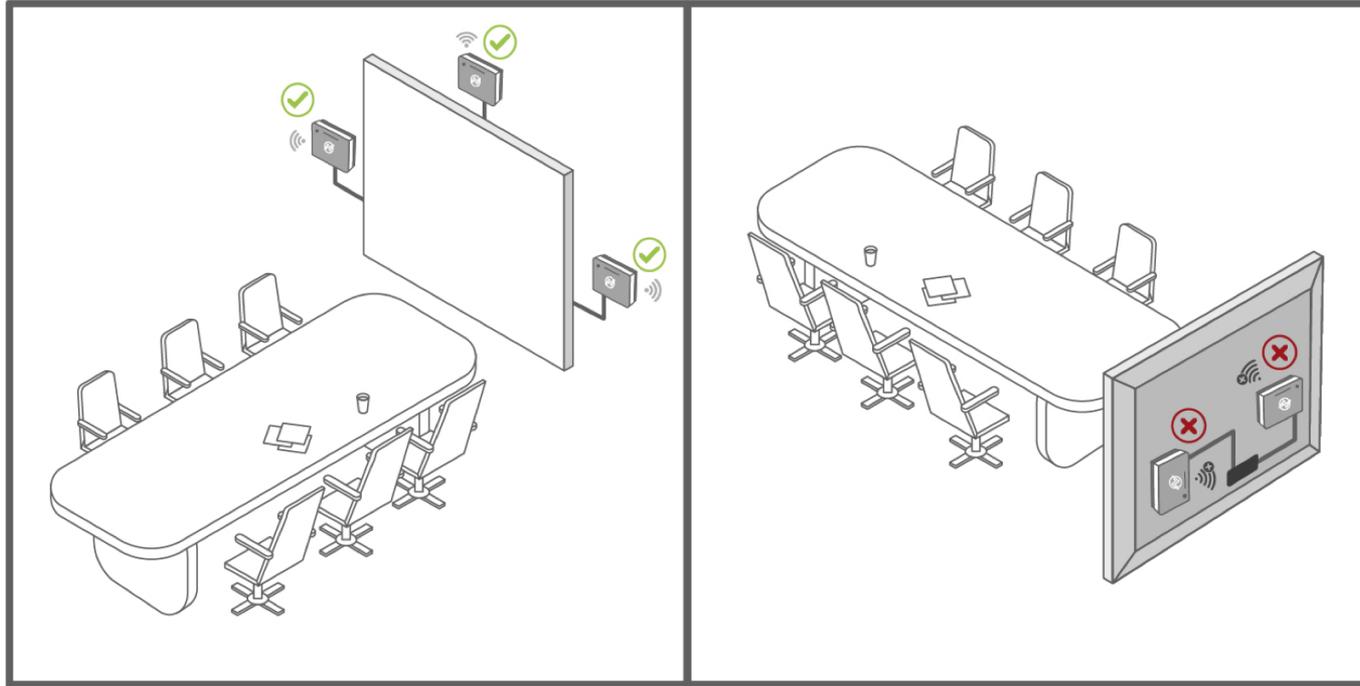


Q & A: Receiver

To place the receiver with a projector

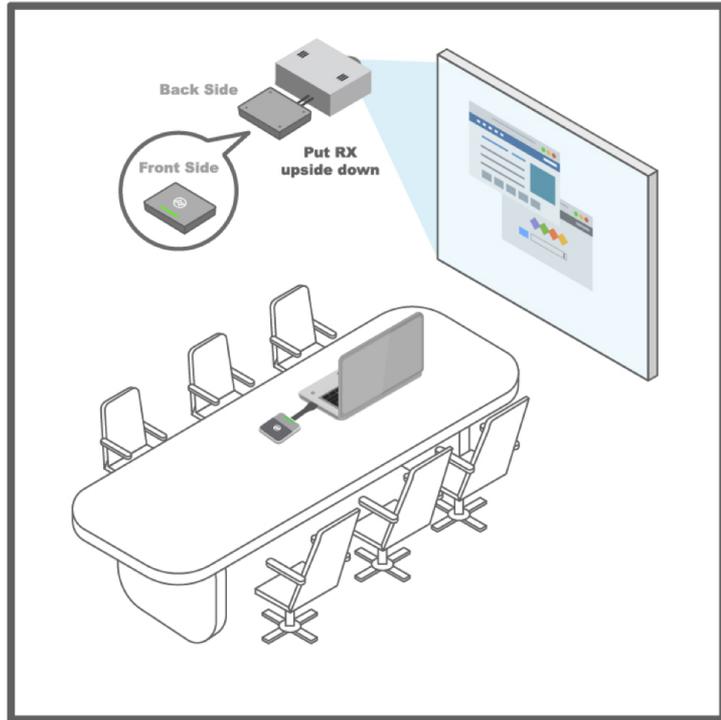

Receiver signal strength at different locations

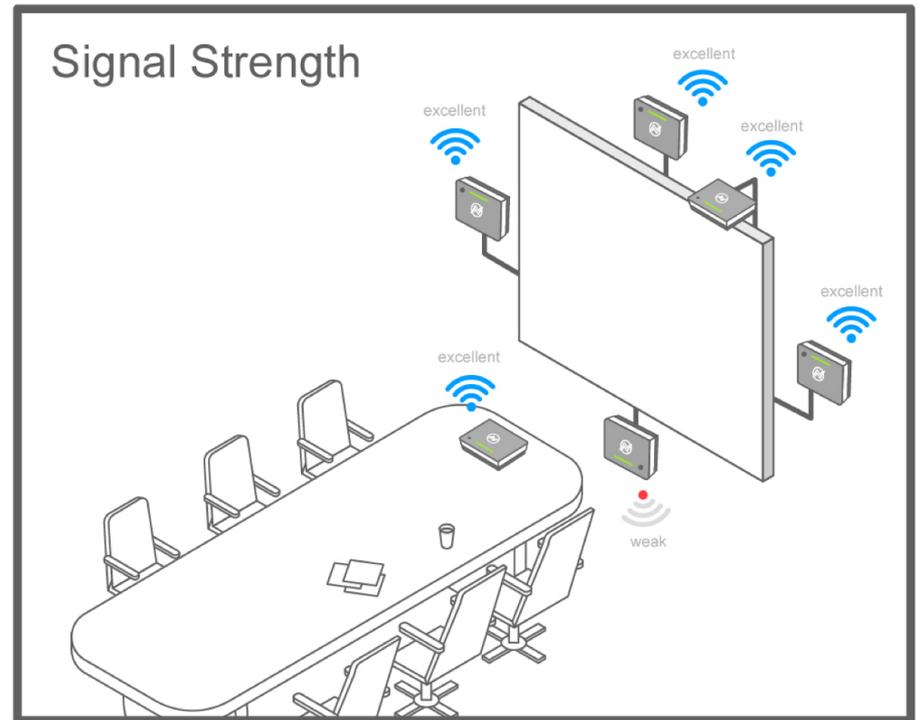

Q & A: Receiver



No Image shows on the screen



Check if power adaptor is 5V/4A and if power adapter is well connected



Make sure your display supports 1920*1080 resolution



Select correct input source



Receiver power supply in 5V/4A



Display resolution support above 1920*1080p



Q & A: Transmitter



How to play the button?




Press the center NorthVision logo to "Play" and "Pause" the image



Can I pair the transmitter with another receiver?



Press the transmitter button for 10 seconds then release, it proceeds pairing process automatically

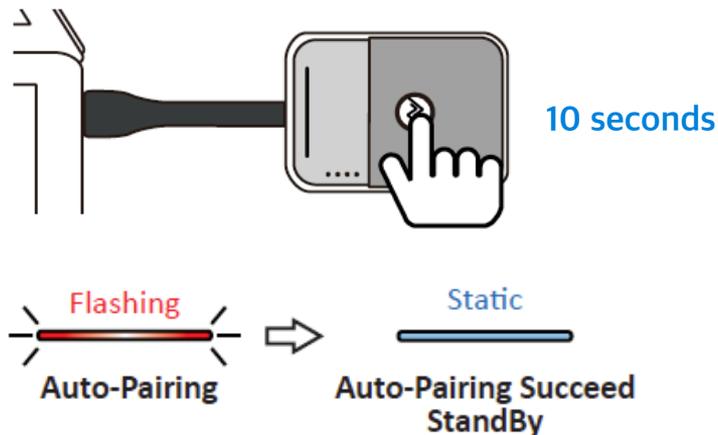

Q & A: Transmitter



No LED light bar when plug in to HDMI port



Make sure your transmitter devices are fully charged

1. Charging Station



Make sure your transmitter is well positioned in the charging station

Power supply in station: 5V/4A

2. Micro USB



Make sure the micro USB cable is connected to the transmitter


Power supply in micro USB: 5V/1.5A



Fails to Charge



No Power
Deep sleep mode

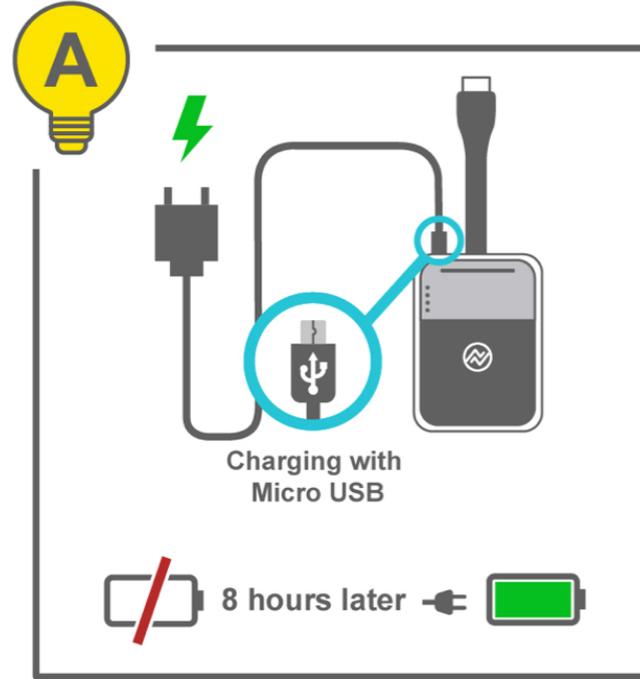

When first time use or if there is a long time with no use, please make sure the transmitter battery has charged over 8 hours before use


Q & A: Image issue




Image shows black when press play button?



A1: Display resolution doesn't support input resolution
A2: Adjust input resolution to match or change it to 1920x1080 or 3840x2160

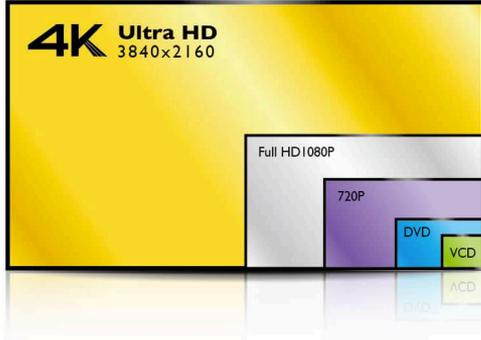


1920x1080
or
3840x2160

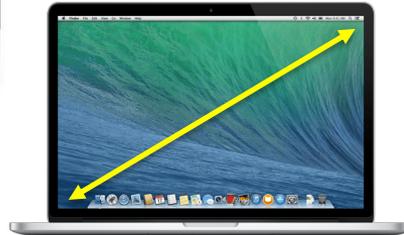

No image shows



A1: Didn't press the button properly
A2: Pressed too many times the button

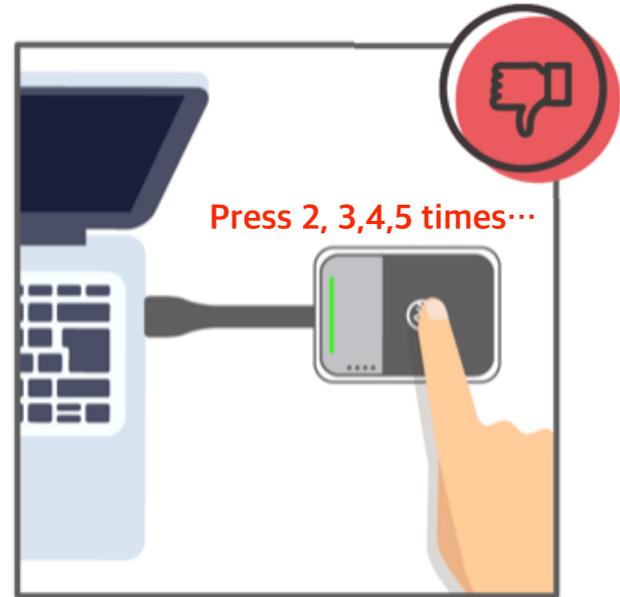

Q & A: Signal issue



Signal issue: No signal or image is disconnected




The best way to use Visionshare

Weak / No Signal




Good Signal

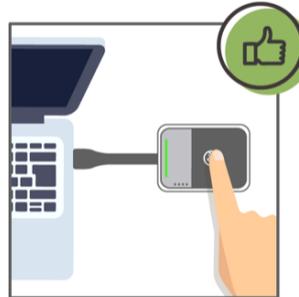

Q & A: Menu setting



Unable to navigate into VisionShare system setting

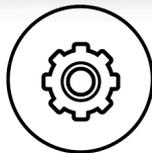

Set up button



A1: Make sure your input source (keyboard/mouse/touch display) supports HID code

A2: Make sure the USB cable is connected between the display and the receiver



TypeB
(Display)

TypeA
(Receiver)






How to use “Mirroring360” with personal devices?

Step1:

Connect the ethernet cable to your receiver and make sure the IP address is displayed on the screen

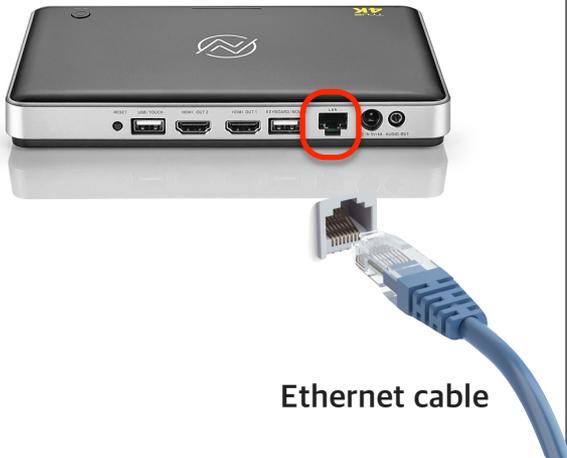

Step2:

Android/Windows/Chrome system:

Download and install “Mirroring360” on your Android devices before use.



Download link:

www.NorthVision.com/download

iOS/MAC system:

Use “Airplay” function to mirror the image wirelessly



Step3:

Open Mirroring360 from main menu, find correct IP address and connect.

Make sure your BYOD is connected to the same network

